Low-Noise Voltage Preamplifier

SR560 — DC to 1 MHz voltage preamplifier



- 4 nV/√Hz input noise
- · 1 MHz bandwidth
- · Variable gain from 1 to 50,000
- AC or DC coupled
- Two configurable signal filters
- Differential and single-ended inputs
- · Line or battery operation
- · RS-232 interface

SR560 Low-Noise Preamplifier

The SR560 is a high-performance, low-noise preamplifier that is ideal for a wide range of applications including low temperature measurements, optical detection, and audio engineering.

Inputs

The SR560 has a differential front-end with 4 nV/ \sqrt{Hz} input noise and an input impedance of 100 M Ω . Complete noise figure contours are shown in the SR560 Tech Note at the end of this section. The SR560's inputs are fully floating (BNC shields are not connected to chassis ground). Both the amplifier ground and the chassis ground are available on the rear panel for flexibility in grounding the instrument. Input offset nulling is accomplished by a front-panel potentiometer, accessible with a small screwdriver.

In addition to the signal inputs, a rear-panel TTL blanking input lets you quickly turn off and on the instrument's gain. This is useful in preventing front-end overloading. The gain turns off 5 μs after the TTL level goes high, and back on again within 10 μs after the TTL signal goes low.

Outputs

Two insulated output BNC connectors provide 600Ω and 50Ω outputs. Both are capable of driving 10 Vpp into their respective loads. Two rear-panel power supply outputs

provide up to 200 mA of ± 12 VDC referenced to the amplifier ground. The outputs provide clean DC power for use as a bias source.

Gain

Gain is selectable from 1 to 50,000 in a 1-2-5 sequence. An adjustable gain feature lets you specify the gain as a percentage of any of the fixed gain settings with 0.5 % resolution. Gain can be selectively allocated before the filters to optimize noise performance, or after the filters to reduce susceptibility to overloads.

Filters

The SR560 contains two first-order RC filters whose cutoff frequency and type (HPF or LPF) can be configured from the front panel. Together, the filters can be configured as a 6 or 12 dB/oct rolloff low-pass or high-pass filter, or as a 6 dB/oct rolloff band-pass filter. A filter reset button is included to shorten the overload recovery time of the instrument when long filter time constants are being used. Filter cutoff frequencies can be set in a 1-3-10 sequence from 0.03 Hz to 1 MHz.

Battery Operation


Three rechargeable lead-acid batteries provide up to 15 hours of battery powered operation. An internal battery charger automatically charges the batteries when the unit is connected to the line. The charger senses the battery state and adjusts the charging rate accordingly. Two rear-panel LEDs indicate the charge state of the batteries. When the batteries become discharged, they are automatically disconnected from the amplifier circuit to avoid battery damage.

No Digital Noise


The microprocessor that runs the SR560 is "asleep" except during the brief interval it takes to change the instrument's setup. This ensures that no digital noise will contaminate low-level analog signals.

RS-232 Interface

The RS-232 interface allows listen-only communication with the SR560 at 9600 baud. Up to four SR560s can be controlled from a single computer, with each SR560 being assigned a unique address. A "Listen" command specifies which SR560 will respond to commands on the RS-232 line. All functions of the instrument (except power on) can be set via the RS-232 interface. The RS-232 interface is opto-isolated from the amplifier circuitry to provide maximum noise immunity.

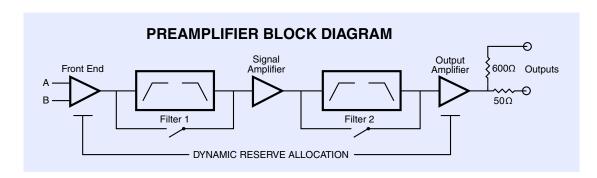

Dynamic reserve vs. frequency

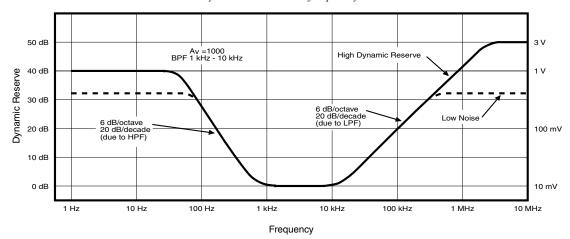

SR560 Specifications

Input

Inputs AC or DC coupled, single-ended

or differential

Input impedance $100 \,\mathrm{M}\Omega + 25 \,\mathrm{pF}$

Maximum input 3 Vpp

CMRR 100 dB from DC to 1 kHz

> (100 mV common mode input at 1 kHz, gain of 100, low noise mode. Decreases by 6 dB/octave from

1 kHz to 1 MHz)

Noise 4 nV/√Hz at 1 kHz

Gain 1 to 50,000 in 1-2-5 sequence

Vernier gain in 0.5% steps

Gain stability 200 ppm/°C

-3 dB at 1.2 MHz (typ.) Bandwidth Flatness $\pm 0.3 \, dB$ to $300 \, kHz$ (gains up to 1000)

Signal filters 2 configurable (low-pass or high-

pass) 6 dB/oct rolloff filters.

−3 dB points are settable in a 1-3-10 sequence from 0.03 Hz to 1 MHz. High Dynamic Reserve — Gain is

Gain allocation increased after the signal filters to

prevent overloading.

Low Noise — Gain is increased

before the filters to improve

noise figure.

Output

Filters

Maximum output $10 \, \text{Vpp}$ into $50 \, \Omega$ and $600 \, \Omega$

Long time constant filters may be Filter reset

reset with front-panel button. DC drift

5 μV/°C referred to input

(DC coupled)

Ordering Information

SR560 Low-noise voltage preamplifier

O560RMD Double rack mount kit Single rack mount kit **0560RMS** O560SB Spare battery set (3 batteries)



SR560 rear panel

 $0.01\,\%$ at $1\,kHz$ Distortion

Rear panel ±12 VDC @ 200 mA referenced to

amplifier ground

General

External gating TTL input sets gain to zero Interfaces RS-232, 9600 baud, receive only Power

100/120/220/240 VAC, 6 W charged, 30 W while charging. Internal batteries provide 15 hours of operation between charges. Batteries are charged while


connected to the line.

Dimensions $8.3" \times 3.5" \times 13.0"$ (WHD) Weight 15 lbs. (batteries installed)

Warranty One year parts and labor on defects

in materials and workmanship

Short Circuit Input Noise Voltage

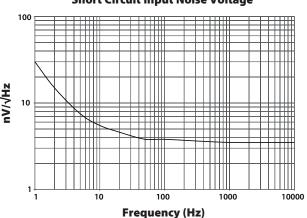

SR560 Noise Figure

